

***Continental***  
***Electric***

**SANDWICH MAKER  
SANDWICHERA**



**OPERATING MANUAL  
MANUAL DE INSTRUCCIONES**

**Modelo/Modelo:  
CE23831**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid(s).
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting in or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

**Merchandise for household use only.  
No user-serviceable parts inside. Refer servicing to qualified service personnel.**

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. An extension cord may be used with care; however, **the marked electrical rating should not be at least as great as the electrical rating of this appliance.** The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.

## POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other), as a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## HOW TO MAKE TOASTED SANDWICHES

1. When using the first time, wipe the surface of the platens with a damp cloth and dry with cloth, tissue etc. Then smear the platen with butter, margarine or cooking fat.
2. Fit the plug into the wall socket.
3. Close the Sandwich Maker and prepare sandwich while toaster is heating.
4. When the Sandwich Maker is ready after about 5 mins., the ready to cook light will come on (or light will be off if the toaster has only one light).
5. Fully open the Sandwich Maker. Place a slice of bread in the bottom half with the buttered side against the platen.
6. Fill the sandwich, pressing the bottom half into the platen.
7. Place on the top slice with the buttered side up and carefully close the two parts of the toaster together. Do not force shut. Steam will be ejected from between the platens while doing this and care must be taken to ensure that fingers do not come into contact with same.
8. Lock the two halves with the wire clip while toasting is taking place.  
NOTE - During toasting the warning light will cycle on and off while the thermostat keeps the toaster at the right temperature. Cook only with metal platen closed.
9. Your sandwich will be toasted in 2-3 mins. or longer to suit your taste. Open the toaster and remove sandwich using plastic or wooden spatula. Never use metal knife as this may damage the non-stick coating.
10. Close the lid to preserve the heat until ready to toast the next sandwiches.
11. Prepare further sandwiches if required while the one is cooking.
12. After use, remove the plug from the wall socket.

## HINTS FOR BEST RESULTS

1. Always preheat before using. Plug cord into power outlet while preparing the fillings.
2. For soft or liquid sandwich fillings use medium sliced bread, white or brown. If small amounts of filling use toasting bread.
3. Flavored butters may also be used.
4. For added flavor use bacon dripping. Brush stripping on outside of bread.
5. Suggested garnishes for savory sandwiches: lettuce, parsley, mint, cress, stuffed olive halves, onion, tomato, etc.
6. A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crisper (especially with fruit fillings).

## CLEANING

- After use and before cleaning remove plug, wait for toaster to cool.
- Wipe the inside and the edges of the platen with kitchen roll, absorbent paper towel or a soft cloth.
- Should any filling be difficult to remove, pour a little cooking oil onto the platen and wipe off after five mins. when the food has softened.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enter the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.

DO NOT IMMERSE IN WATER OR ANY LIQUID

## COMO HACER SANDWICHES TOSTADAS

1. Cuando lo use por primera vez limpie el interior con un paño húmedo y séquelo. Luego unte en las placas manteca ó margarina.
2. Conecte el enchufe a la toma eléctrico.
3. Cierre su sandwichera y prepare los sandwiches mientras se calienta.
4. Cuando la sandwichera está lista, después de aproximadamente 5 minutos, la luz de cocción se encenderá (ó la luz se apagará si la sandwichera tiene una sola luz).
5. Abra completamente su sandwichera. Coloque una rebanada de pan con la cara con margarina contra la placa.
6. Rellene el sandwich, presionando la rebanada inferior dentro de la placa.
7. Ponga la rebanada superior con margarina hacia arriba y cierre cuidadosamente las dos partes de la sandwichera. No fuerce el cierre, y asegúrese que sus dedos no tengan contacto con el vapor que saldrá por entre las placas.
8. Trabe ambas mitadas con la abrazadera.  
NOTA: Durante la cocción, la luz se apagará y encenderá intermitentemente mientras el termostato mantiene la sandwichera en la temperatura correcta. Cocine exclusivamente con las placas metálicas cerradas.
9. Su sandwich estará listo en 2 ó 3 minutos de acuerdo a su gusto. Abra la sandwichera y retire el mismo usando una espátula de madera o plástico. Nunca use un cuchillo metálico ya que podría dañar el revestimiento antiadherente.
10. Cierre la tapa para preservar el calor hasta que se disponga a preparar los próximos sandwiches.
11. Repita la operación con los sandwiches requeridos.
12. Después de usarlo, retire el enchufe de la toma eléctrica.

## LIMPIEZA

- Después de usarlo y antes de limpiarlo retire el enchufe y espere a que se enfríe.
- Limpie el interior y los bordes con papel absorbente o paño suave.
- Si quedan restos difíciles de remover, vierta un poco de aceite de cocina sobre la placa y vuelva a limpiar después de 5 minutos.
- Limpie el exterior únicamente con un paño apenas húmedo asegurándose que no entre agua, aceite o grasa por las ranuras de ventilación.
- Nunca use limpiadores abrasivos o esponja de metal.
- No lo sumerja en agua u otro líquido.

## ONE YEAR LIMITED WARRANTY

CEM Global warrants your new product to be free from defects in materials and workmanship under normal household use for a period of one (1) year from the date of purchase. During this period, such defects will be repaired or the product replaced by Cem Global without charge. This warranty does not cover exterior or interior finish or damage caused by misuse, accident, or negligence.

A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

If a problem with this item develops during warranty period, please contact CEM Global, for service.

Any appliance submitted for repair must be sent (transportation charges prepaid) to:

CEM GLOBAL, LLC.

ATTN: CUSTOMER SERVICE

6950 N.W.77th Court • Miami, FL 33166

If you have any questions concerning the use and care of this product or comments regarding your experience with the product, we would like to hear from you.

If you have a claim under this warranty please follow these procedures:

- 1) Within the first forty-five (45) days from date of original purchase, defective product should be returned to original place of purchase for replacement (with proof-of-purchase).
- 2) Within the first twelve (12) months from date of

purchase CEM Global LLC will repair or replace (at no charge) the defective product if it is delivered freight prepaid during that period to an authorized service station. To obtain warranty service visit:

www.cemglobal.com

Or, you may write to CEM Global LLC, attention: Customer Service, 6950 NW 77th Court, Miami, FL 33166. Proof of purchase is required when requesting warranty service – SAVE YOUR SALES RECEIPT. This warranty is extended only to the original purchaser and does not apply to commercial use, or to damage to the product (not resulting from defect or malfunction) while in the possession of the consumer. CEM Global LLC disclaims all responsibility for consequential, incidental, or commercial losses caused by the use of this product. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you also have other legal rights which vary from state to state.

If Service is Required:

\* Send a brief letter explaining the problem.

Be sure to include your name, address, and phone number.

\* For faster service, call 1 866 915 1212 or e-mail customerservice@cemglobal.com

\* Many service problems can be resolved by replacing a broken or defective part.

## GARANTIA VALIDA POR UN (1) AÑO

CEM Global garantiza su nuevo producto, el cual esta protegido contra defectos en materiales o mano de obra. Este producto es para uso normal del hogar. Su producto esta garantizado por el periodo de un (1) año desde la fecha de compra. Durante este periodo, cualquier daño descrito anteriormente será reparado o el producto substituido por CEM Global sin costo adicional. Esta garantía no cubre el daño causado por el mal uso, accidentes, o la negligencia. Se requerirá un recibo de compra original, antes de dar el servicio de garantía. Si tiene algún problema con este artículo o se desarrolla alguno durante el periodo de la garantía, por favor póngase en contacto con CEM Global, para el servicio. Cualquier pago adicional para la reparación debe ser enviada (gastos de transporte pagado por adelantado):

CEM GLOBAL, LLC.

ATTN: CUSTOMER SERVICE •

6950 N.W.77th Court Miami, FL 33166

Si usted tiene cualquier pregunta referente al uso y cuidado de este producto, ó comentarios referentes a su experiencia con este producto, nos gustaría escuchar al respecto.

Si usted tiene un reclamo bajo el periodo de esta garantía por favor siga el siguiente procedimiento:

- 1) Dentro de los primeros 45 días desde la fecha original de compra, cualquier producto defectuoso deberá ser retornado al lugar original de compra para su reemplazo (previa presentación de prueba de compra).
- 2) Dentro de los primeros 12 meses desde la fecha original de compra, CEM Global LLC reparará ó

reemplazará (sin costo alguno) el producto defectuoso, siempre que sea enviado al centro de servicio autorizado con los gastos de transporte prepagados. Para obtener servicio de garantía visitenos: www.cemglobal.com

O puede escribir a CEM Global LLC, atención: Servicio al Cliente, 6950 NW 77th Court, Miami, FL 33166. Una prueba de compra es requerida para solicitar el servicio de garantía. – CONSERVE SUS RECIBOS DE COMPRA.

Esta garantía es válida únicamente para el comprador original, no se aplica a uso comercial, ó a daños en el producto que no sean resultado de defectos o mal funcionamiento mientras esté en posesión del consumidor. CEM Global LLC no se hace responsable por pérdidas comerciales, circunstanciales, ó como consecuencia del uso de este producto. Algunos estados no permiten esta exclusión o limitación de pérdidas circunstanciales ó pérdidas como consecuencia del uso del producto, por lo tanto la declaración previa puede que no se ajuste a usted. Esta garantía le da derechos legales específicos, y usted puede también tener otros derechos legales los cuales varían de estado en estado.

Si Requiere el Servicio:

\* Envíe una breve carta que explique el problema. Esté seguro de incluir su nombre, dirección, y el número de teléfono.

\* Para un servicio más rápido, llame al 1 866 915 1212 o envíe un correo electrónico a customerservice@cemglobal.com

\* Muchos problemas de servicio pueden ser resueltos substituyendo una parte rota o defectuosa.

Please detach and mail registration card within 10 days to validate warranty

Por favor recorte y envíe esta tarjeta por correo para validar su garantía.

### WARRANTY REGISTRATION CARD

(Please Print Clearly)

Product: \_\_\_\_\_

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Purchased From: \_\_\_\_\_

Date Purchase: \_\_\_\_\_

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Why did you select this item?

Health Benefits

Item Features

Styling

Warranty

Power

Price

Other (please specify)

How did you learn about this item?

Store Sales Clerk

Gift

Friend

Store Display

Demonstration

Advertising (specify)

### CARTA DE GARANTÍA

(Llenar en Letra de Molde)

Producto: \_\_\_\_\_

Nombre: \_\_\_\_\_

Dirección: \_\_\_\_\_

País: \_\_\_\_\_

Estado: \_\_\_\_\_

Ciudad: \_\_\_\_\_

Zona Postal: \_\_\_\_\_

Lugar de compra: \_\_\_\_\_

Fecha de compra: \_\_\_\_\_

Comentarios: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Porque eligió este producto ?

Beneficios de Salud

Características

Diseño

Garantía

Potencia

Precio

Otros (Especifique)

Como se entero de este producto?

Impulsador

Obsequio

Amigo

Exhibidor

Demostración

Publicidad (Especifique)